
## HYVA OIL TANKS

## CRADLE MOUNTED TANK WITH VALVE MOUNTING BLOCK



Hyva CM - 066L/052L - MP - RF 140 16 280 part number tank: Page 1 / 2 52 liters working volume:

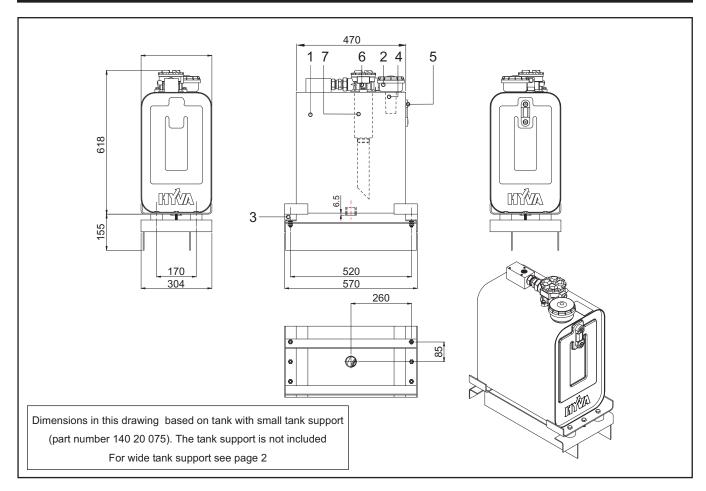

#### Part list

| Pos. | Part no.   | Description                   | Qty. |
|------|------------|-------------------------------|------|
| 1    | 140 16 280 | tank CM - 066L/052L - MP - RF | 1    |
| 2    | 081 02 116 | air breather filter           | 1    |
| 3    | 081 01 073 | vibration damper M10x30       | 4    |
| 4    |            | Bolt M12x60 and nut           | 2    |
|      |            |                               |      |

#### **Spare Parts**

| Pos. | Part no.     | Description        | Qty. |
|------|--------------|--------------------|------|
| 4    | 081 02 117   | air filter element | 1    |
| 5    | 081 02 129   | level indicator    | 1    |
| 6    | 147 80 306   | return line filter | 1    |
| 7    | 148 96 991 A | oil filter element | 1    |

## General information

#### Pay attention to the following points:

- Mount the tank according the mounting instructions.
  Fill the tank with the recommended hydraulic oil to the centre of the level indicator.
- Change the oil once a year.
- Replace the air breather element twice a year.
- Do not use the tank as a support or to stand on.
- Do not weld to the oil tank.
- Check the vibration dampers monthly.

## Mounting instructions

#### Cradle mounted tank on chassis

Before mounting oil tank, check carefully whether all openings and connections are free of packaging tape, dirt or particles etc.

- Mounting tank on tank support Put the 4 vibration dampers on the support and then put the tank on the dampers. Use the self-locking nuts on the dampers. Mount a M12x60 bolt with lock nut through the central hole as safety. Do not tighten the nut. Torque the self-locking nuts to 30 Nm. Check the bolts on torque
- Mounting the tank support on the cylinder cradle Place the back of the tank support at least 180 mm inside the cradle. Plug weld the support to the cradle through the holes in the cradle
- Sealing Use fluid sealant or Teflon tape when fitting to a hydraulic component without O-ring. When a hydraulic component is provided with O-ring, no tape or fluid sealant is necessary.

### **Specifications**

| Gross volume       | : | 66    | Liters |
|--------------------|---|-------|--------|
| Working volume     | : | 52    | Liters |
| Weight tank        | : | 28    | kg     |
| Weight support     | : | 12    | kg.    |
| Suction connection |   | 11/4" | RSPIT  |

# HYVA OIL TANKS



## CRADLE MOUNTED TANK WITH RETURN FILTER AND VALVE MOUNTING BLOCK

 Hyva
 type :
 CM - 066L/052L MP - RF

 part number tank :
 140 16 280

 Page 2 / 2
 working volume :
 52 liters

